

## ARES

All work, like installation must be carried out by the qualified person – with professional qualifications and expertise in electricity and electrotechnics accordance with law and rules in concrete country. <u>Disconnect power supply before any installation or manipulation – preferably with circuit breaker.</u>

1. Remove the front grill with a small screwdriver and prepare the mounting holes for wires leading from the wall. Install the fan so the service cables will be in lower part of the fan. Place the fan into air duct with suitable diameter. In a prepared place drill a hole for the electric service cable. (Warning! Sharp edges can damage wire insulation!). Install the fan using suitable screws and plugs.

 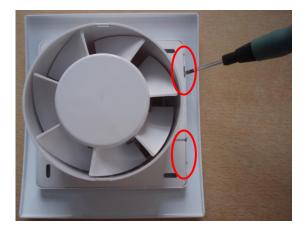


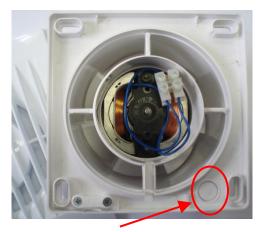


Mounting hole


 Connect the fan with power supply using the terminal strip. Usually goes from wall electric cable with 3 wires, so the blue is directly earth conductor (N), brown / black is the phase conductor (L – under constant voltage) and third yellow-green is the circuit protective conductor (no need to connect when mounting plastic fan, can be blinded).

Install the fan so the service cables will be in lower part of the fan.



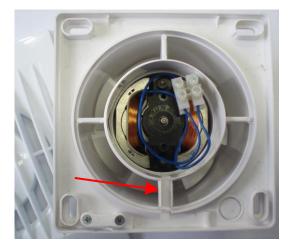

Place for service cable

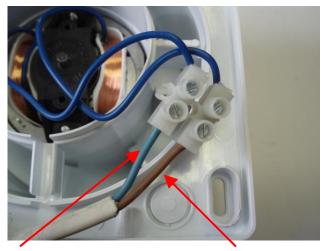

Directly earthed conductor (N) Phase (L)

- 3. Cover the electronics and mount the front grill. Cable outlet should be in košer part of the fan and the plates in horizontál position. Connect per supply switch on the circuit breaker.
- 4. Turn on on-off switch to bring power supply 230V/50Hz into device fan starts to work. Turn off on-off switch to disconnect power supply fan stop works.
- 5. Troubleshooting

	Trouble	Why	Solutions
1.	Device does not work	1.1. Missing voltage	Switch on the curcuit breaker
		1.2. Device is mounted	Switch off the circuit breaker and controll connection of cable from the wall and fan motor into terminal strip, switch on the curcuit breaker.

6. Pay attention to regular service (once in 6 month minimum).
<u>Disconnect power supply before any installation or manipulation – preferably with circuit breaker.</u> Clean with moist clout with a little bit detergent – NOT!abrasiveness clearing agent, diluent or petrol. Dry it properly. Fan motor can't get wet in any case. Connect the fan with power supply using the terminal strip and kontrol proper run of the fan.

Only correct instalation and service will ensure long life working.

7. The warranty covers manufacturing defects, material defects or defects of instrument functions. The warranty does not cover mechanical damage, incorrect connection to power supply, incorrect servicing, use of the device in unappropriate conditions, common use, damage by third person, natural disaster or overvoltage.