


User's manual - ENTER 12V / IRIS 12V

All work, like installation must be carried out by the qualified person – with professional qualifications and expertise in electricity and electrotechnics accordance with law and rules in concrete country.
Disconnect power supply before any installation or manipulation – preferably with circuit breaker.

1. Remove the cover with a small screwdriver. Install the fan so the service cables will be in lower part of the fan. Place the fan into air duct with suitable diameter. In a prepared place drill a hole for the electric service cable. (Warning! Sharp edges can damage wire insulation!). Install the fan using suitable screws and plugs.

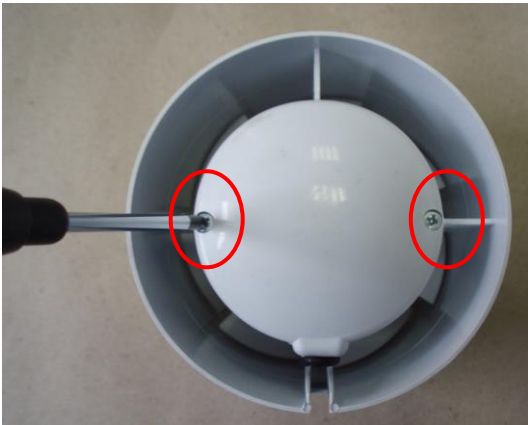


Mounting hole

2. Connect the fan with power supply using the terminal strip and **toroid transformer**. Usually goes from wall electric cable with 3 wires, so the blue is directly earthed conductor (N), brown / black is the phase conductor (L – under constant voltage) and third yellow-green is the circuit protective conductor (no need to connect when mounting plastic fan, can be blinded). Install the fan so the service cables will be in lower part of the fan.




Toroid transformer

3. Domestic tubular fan IRIS can be mounted only to the wall (slide bearings)! Install the fan so the service cables will be in lower part of the fan.
It is necessary to connect toroid transformer, which bring safe voltage 12V/50Hz to device. If you don't use toroid transformer fan device's motor will be damaged (not possible to complain!).

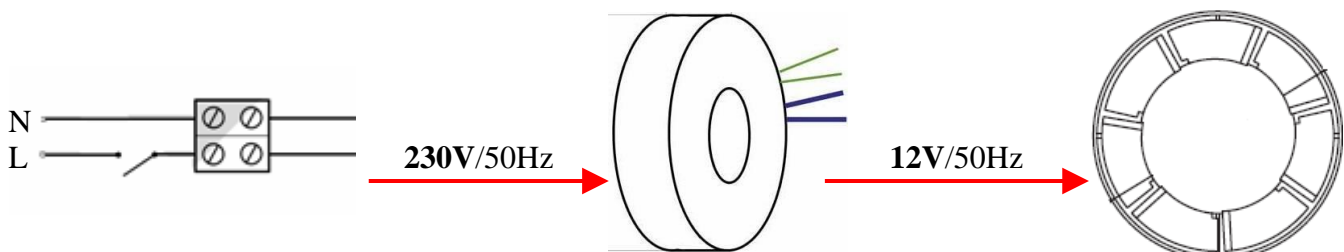

Service cable from wall
With power supply 230V/50Hz
Blue – Directly earthed
conductor (N)
Brown - Phase (L)

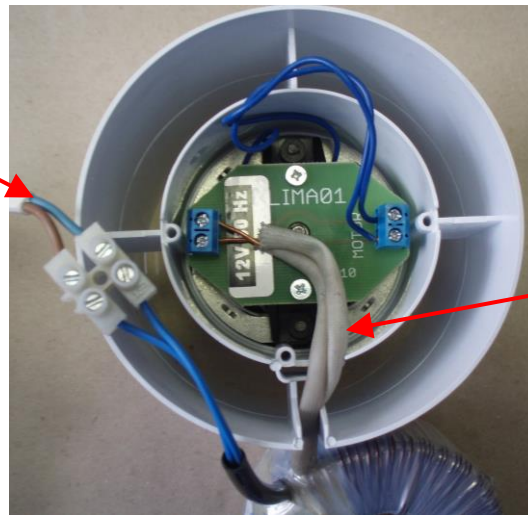

Cable from
transformer into
motor with
reduced power
supply 12V/50 Hz


Toroid transformer

There is a special terminal plate with clear sign, where to connect which cable to make installation easier.




Cable
from motor

Cable from
toroid
transformer

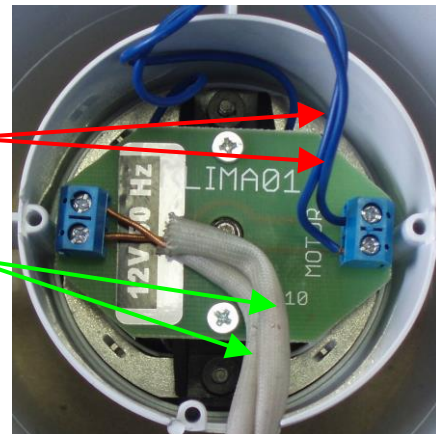

4. Re-mount and screw the cover. Domestic tubular fan IRIS can be mounted only to the wall (slide bearings). Connect power supply – switch on the circuit breaker.

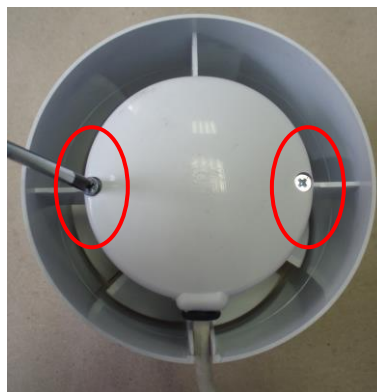

5. Turn on on-off switch to bring power supply 230V/50Hz into device – fan starts to work. Turn off on-off switch to disconnect power supply – fan stop works.

6. Troubleshooting

	Trouble	Why	Solutions
1.	Device does not work	1.1. Missing voltage	Switch on the circuit breaker
		1.2. Device is mounted wrong	Switch off the circuit breaker and control connection of cable from the wall and fan motor into terminal strip, switch on the circuit breaker.

7. Pay attention to regular service (once in 6 month minimum).

Disconnect power supply before any installation or manipulation – preferably with circuit breaker.

Clean with moist cloth with a little bit detergent – NOT! abrasiveness clearing agent, diluent or petrol.

Dry it properly. Fan motor can't get wet in any case.

Connect the fan with power supply using the terminal strip and control proper run of the fan.

Only correct installation and service will ensure long life working.

7. The warranty covers manufacturing defects, material defects or defects of instrument functions. The warranty does not cover mechanical damage, incorrect connection to power supply, incorrect servicing, use of the device in inappropriate conditions, common use, damage by third person, natural disaster or overvoltage.